

LANCAIR LEGACY 2000 INDEX

A											
ACCESS PANELS,			AUTOPILOT,			CABIN HEAT/DEFROSTER,			COOLERBOX,		
Baggage Floorboard	chap. 23	sec. D	Installation			Assembly	chap. 22	sec. B	Oil		
Center Console Forward	chap. 14	sec. D	Pitch	chap. 24	sec. E:1	CANOPY,			Continental 550 Installation	chap. 26	sec. D:3
Control Tube Closeout	chap. 23	sec. A	Roll	chap. 24	sec. E:3	Alignment Mechanism	chap. 9	sec. F	COUNTERWEIGHTS,		
Elevator Weldment	chap. 12	sec. C	AVIONICS MOUNTING SHELF,			BID Reinforcements	chap. 9	sec. B:6	Rudder		
Floorboard, Rudder Pedal	chap. 17	sec. F	Installation	chap. 20	sec. C	Centering Plates	chap. 9	sec. F:2	Adjusting	chap. 17	sec. D
ACTUATOR ARM,						Defroster	chap. 9	sec. H	Closing out	chap. 17	sec. C:3
Nose Gear Door			B			Gas Strut	chap. 9	sec. D	Installation	chap. 12	sec. A
Installation	chap. 13	sec. F	BAFFLING,			Hinge	chap. 9	sec. C	COVER,		
Rudder Trim Tab			Continental 550			Latch Mechanism	chap. 9	sec. A	Bulkhead	chap. 23	sec. B
Reinforcing Rivets	chap. 17	sec. C:3	Installation	chap. 26	sec. D	Seal	chap. 9	sec. J	Dust	chap. 20	sec. B
ADHESIVE,			Seal, Assembly	chap. 26	sec. D:11	Skin			Fuel Drain	chap. 4	sec. H
Applying	chap. 8	sec. A:5	BAGGAGE COMPARTMENT,			Alignment	chap. 9	sec. B:9	Speed Brake	chap. 3	sec. K
Structural	chap. 1	sec. E	Bulkhead Cover	chap. 23	sec. B	Bonding	chap. 9	sec. I	COWLING,		
AFT CLOSEOUT RIB,			Floorboards	chap. 23	sec. D	Trimming	chap. 9	sec. B:8	Continental 550 Installation	chap. 26	sec. C
Installation	chap. 10	sec. C	BATTERY BOX			Stiffener Alignment	chap. 9	sec. B	Lycoming 540 Installation	chap. 26	sec. C
AFT SPAR,			Installation	chap. 27	sec. B	Striker Plate	chap. 9	sec. E	Oil Access Door		
Transition Holes	chap. 3	sec. I	BELLCRANK,			Windshield	chap. 9	sec. G	Continental 550	chap. 26	sec. C:3
AILERON,			Aileron	chap. 6	sec. B:2	CENTER CONSOLE,			Lycoming 540	chap. 26	sec. C:3
Control Stick Installation	chap. 6	sec. A	BID TAPES,			Bonding	chap. 14	sec. H	CRADLE,		
Control Rigging	chap. 6	sec. B	Finishing Techniques	chap. 28	sec. A	Fitting	chap. 14	sec. B	Alignment Jig		
Counter Balancing	chap. 6	sec. C	Leading Edge	chap. 8	sec. A:7	Glove Box	chap. 14	sec. A	Aft Fuselage	chap. 7	sec. B:3
Travel	chap. 6	sec. B:4	BRACKET,			Seat Belt Reinforcement	chap. 14	sec. C	Horizontal Stab	chap. 7	sec. B:3
Trim System	chap. 6	sec. D	Continental 550 Systems			CENTER OF GRAVITY COMPUTATION		see POH	Vertical Stab	chap. 7	sec. C:2
Trim Servo Wiring	chap. 27	sec. G:2	Gascolator	chap. 26	sec. G:1	CENTER WING SECTION,			Wing	chap. 7	sec. A
ALIGNMENT HOLES,			Throttle Cable	chap. 26	sec. E:1	Aft Closeout Rib	chap. 10	sec. C	Horizontal Stabilizer	chap. 2	sec. A:2
Drilling	chap. 1	sec. L	Prop Governor Cable	chap. 26	sec. E:2	Bonding	chap. 10	sec. A:7	CROSS OVER WELDMENT,		
ALIGNMENT JIG,			Mixture Cable	chap. 26	sec. E:3	Closing	chap. 10	sec. D	Installation	chap. 6	sec. A
Cradles			BRAKES,			Fitting	chap. 10	sec. A:1			
Aft Fuselage	chap. 7	sec. B:3	Speed	chap. 3	sec. K	Hydraulics	chap. 3	sec. H	D		
Horizontal Stab	chap. 7	sec. B:3	BRAKE SYSTEM,			Load Pads	chap. 10	sec. B	DEFROSTER,		
Vertical Stab	chap. 7	sec. C:2	Brake Line Schematic	chap. 18	sec. A	CHECK VALVE,			Cabin Heat Valve	chap. 22	sec. B
Wing	chap. 7	sec. A	Installation	chap. 18	sec. B	Fuel Vent Line	chap. 4	sec. D	Construction	chap. 9	sec. H
AN BOLT HARDWARE,			BREATHERLINE,			CLOSEOUT,			DISTRIBUTOR,		
Guide	chap. 1	sec. F	Oil			Elevator Control Tube	chap. 23	sec. A	Fuel		
ANTENNA,			Continental 550 Installation	chap. 26	sec. H:2	Spar	chap. 3	sec. D	Continental 550 Installation	chap. 26	sec. G:4
Communication	chap. 3	sec. C	BULKHEAD COVER,			COLORS,			DOORS,		
Marker Beacon	chap. 3	sec. B	Installation	chap. 23	sec. B	Base Paint	chap. 28	sec. G	Inboard Main Gear		
Placement	chap. 27	sec. K				Trim Colors	chap. 28	sec. H	Actuator Arm	chap. 13	sec. F:8
Storm Scope	chap. 24	sec. C	C			COMMUNICATION ANTENNA,			Adjusting	chap. 16	sec. C
Transponder	chap. 24	sec. D	CABIN VENTILATION,			Mounting the	chap. 3	sec. C	Installation	chap. 3	sec. E
			Fresh Air	chap. 22	sec. A	CONTROL STICK,			Release	chap. 3	sec. E
						Installation	chap. 6	sec. A	Outboard Main Gear		
						CONTROL TUBE CLOSEOUT, ELEVATOR			Adjusting	chap. 16	sec. E
						Installation	chap. 23	sec. A:2			



LANCAIR LEGACY 2000 INDEX

Installation	chap. 3	sec. E
Release	chap. 3	sec. E
Nose Gear		
Installation	chap. 13	sec. F
Synchronized Closing		
Installation	chap. 3	sec. H:2
DRAIN LINE, Assembly		
Continental 550 Installation	chap. 26	sec. G:5
Exit		
Continental 550 Installation	chap. 26	sec. G:7
DUMP VALVE, Mounting	chap. 14	sec. E
DUST COVER, Installation	chap. 20	sec. B

E

ELEVATOR,		
Closing out	chap. 2	sec. F
Controls Rigging	chap. 19	sec. A
Counter Balancing	chap. 2	sec. E
Exploded View	chap. 2	sec. A:1
Hinges	chap. 2	sec. C
Travel Stops	chap. 2	sec. G
Trimming Inboard Ends	chap. 19	sec. B
Trim System Wiring	chap. 27	sec. G:1
Trim Tab	chap. 2	sec. D
Weldment access panel	chap. 12	sec. C
EMERGENCY LOCATOR TRANSMITTER (ELT), Installation	chap. 24	sec. B
ENGINE,		
Control Systems		
Continental 550	chap. 26	sec. E
Fuel Systems		
Continental 550	chap. 26	sec. G
Mounting		
Continental 550	chap. 26	sec. A
Lycoming 540	chap. 26	sec. A
Oil System		
Continental 550 Installation	chap. 26	sec. H
ENGINE MOUNT,		
Installation	chap. 13	sec. C
Spacer Bonding	chap. 13	sec. B:4

F

FIBER GLASS STRIP, Installation	chap. 1	sec. P
FIREWALL,		
Closeout	chap. 13	sec. A
Flame Blanket,	chap. 13	sec. B:1
FINISHING/BODY WORK, Painting and Interiors	chap. 28	sec. A-H
FLAPS,		
Actuator Mecahnism	chap. 21	sec. C:1
Actuator Pushrod Installation	chap. 21	sec. B:2
Center Torque Tube Support	chap. 21	sec. A
Exploded View	chap. 21	sec. A:1
Installation	chap. 21	sec. B:1
Motor Installation	chap. 21	sec. C
Motor Location	chap. 21	sec. C:2
Torque Tube Installation	chap. 21	sec. A:4
Wiring		
Diagram	chap. 27	sec. H:4
Limit Switch	chap. 27	sec. H:4
Flap Motor Schematic	chap. 27	sec. H
Reed Switch	chap. 27	sec. H:3
Relays	chap. 27	sec. H:2
FLOORBOARDS,		
Baggage Compartment	chap. 23	sec. D
Rudder Pedal	chap. 17	sec. F
FREE FALL TEST,		
Ground	chap. 16	sec. L
In-Flight	chap. 16	sec. M
FUEL SYSTEMS,		
General	chap. 4	sec. A
Line schematic	chap. 3	sec. L
Gascolator		
Continental 550 Installation	chap. 26	sec. G:1
Lines		
Lycoming 540 Installation	chap. 26	sec. E
Primary Layout		
Continental 550 Installation	chap. 26	sec. G:2
FUEL DISTRIBUTOR,		
Continental 550 Installation	chap. 26	sec. G:4
FUEL DRAIN COVERS,		
Installation	chap. 4	sec. H

FUELLINES,

Firewall Aft		
Continental 550	chap. 4	sec. G:2
Firewall forward		
Continental 550	chap. 26	sec. G:2
Lycoming 540 Installation	chap. 26	sec. E
FUEL PRESSURE PORTS,		
Continental 550	chap. 26	sec. G:6
FUEL PUMP,		
Installation	chap. 4	sec. G
Engine Driven		
Continental 550 Installation	chap. 26	sec. G:3
Shroud		
Continental 550 Installation	chap. 26	sec. D:12
Wiring		
Continental Installation	chap. 27	sec. F:2
Lycoming Installation	chap. 27	sec. F:1
FUEL PROBE,		
Installation	chap. 4	sec. F
FUEL RETURN LINES,		
Assembly	chap. 4	sec. E
Line schematic	chap. 3	sec. L
FUEL SELECTOR,		
Mounting	chap. 4	sec. B
Valve Handle	chap. 14	sec. G
FUEL SUPPLY LINES,		
Assembly	chap. 4	sec. C
Line schematic	chap. 3	sec. L
FUEL VENTLINE CHECKVALVE,		
Installation	chap. 4	sec. D

G

GASCOLATOR,		
Continental 550 Installation	chap. 26	sec. G:1
Line schematic	chap. 3	sec. L
Lycoming 540	chap. 26	sec. E:1
GAS STRUT,		
Canopy	chap. 9	sec. D
GEAR SYSTEMS,		
Start Up	chap. 16	sec. J
GENERAL SURFACE PREPARATION,		
Finishing Techniques	chap. 28	sec. C
GLOVE BOX,		
Installation	chap. 14	sec. A

H

HARTWELL TRIGGERLOCK,		
Installation	chap. 23	sec. D:5
HINGE,		
Baggage Floorboard	chap. 23	sec. D:2
Canopy	chap. 9	sec. C
Elevator	chap. 2	sec. C
Flap	chap. 21	sec. A:1
Gear Door		
Main	chap. 3	sec. E
Nose	chap. 13	sec. F
Rudder	chap. 17	sec. B:1
HORIZONTAL STABILIZER,		
Bonding	chap. 11	sec. A
Closing the Horz. Stab & Elevator	chap. 2	sec. F
Counter Balancing	chap. 2	sec. E
Cradle Assembly	chap. 2	sec. A
Exploded View	chap. 2	sec. A:1
Hinge Brackets	chap. 2	sec. B
Vertical Web Installation	chap. 11	sec. B
HYDRAULICS,		
Center Wing Section	chap. 3	sec. H
Firewall Forward	chap. 16	sec. B:3
Line schematic	chap. 3	sec. L
Pump to Baggage Bulkhead	chap. 16	sec. A
HYDRAULIC LINES,		
Fabrication of		
Aft Spar to Baggage...	chap. 16	sec. A:4
Forward of Main Spar	chap. 16	sec. B
HYDRAULIC GEAR,		
Start Up	chap. 16	sec. J



LANCAIR LEGACY 2000 INDEX

W

WHEEL,

Main Gear	chap. 3	sec. G
Nose	chap. 13	sec. E

WINDOWS,

Aft

Installation	chap. 25	sec. C
Preparing Fuselage	chap. 25	sec. A
Preparing Windows	chap. 25	sec. B

WINDSHIELD,

Installation	chap. 9	sec. G
--------------	---------	--------

WING,

Center (Wing) Section

Aft Closeout Rib	chap. 10	sec. C
Bonding	chap. 10	sec. A:7
Closing	chap. 10	sec. D
Load Pads	chap. 10	sec. B

Outboard

Closing	chap. 8	sec. A
Installation/Removal	chap. 5	sec. A
Pressure Testing	chap. 8	sec. B

WIRING,

Basic Aircraft Diagram	chap. 27	sec. C
Basic Techniques	chap. 27	sec. A
Electric Fuel Pump	chap. 27	sec. F
Electric Door Seal	chap. 27	sec. J:1

Flaps

Diagram	chap. 27	sec. H:4
Limit Switch	chap. 27	sec. H:4
Motor Schematic	chap. 27	sec. H:1
Reed Switch	chap. 27	sec. H:3
Relays	chap. 27	sec. H:2

Gear

Gear Pressure Switch	chap. 16	sec. H
Gear Schematic	chap. 16	sec. I
Landing Diagram	chap. 27	sec. D
Landing Switch	chap. 16	sec. F
Micro Switch	chap. 16	sec. G

General

Legacy	chap. 27	sec. B
--------	----------	--------

Lights

Position/Strobe Schematic	chap. 27	sec. E:1
Landing and Taxi	chap. 27	sec. E:2
Instrument Schematic	chap. 27	sec. E:3

Pitot Tube Heat

Schematic	chap. 27	sec. I:1
-----------	----------	----------

Trim System

Aileron Servo	chap. 27	sec. G:2
Elevator	chap. 27	sec. G
Rudder	chap. 27	sec. G
Quadrant Location	chap. 16	sec. F:2